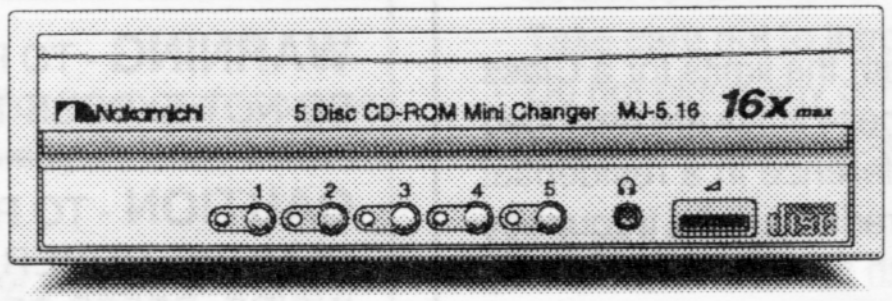
Nakamichi
5 Disc CD-ROM Mini Changer MJ-5.16
16x max
1
2
3
4
5

MJ-5.16si

5 Disc CD-ROM Mini Changer

Owner's Manual

Notice 3
Safety Precautions 3
Usage Precautions 5
Parts and Functions 6
Installation in the Computer 8
Operation 12
Troubleshooting 13
Specifications 13

Nakamichi®

STATEMENTS

WARNING - The Federal Communications Commission does not allow any modifications or changes to the unit EXCEPT as that specified by Nakamichi in this manual. Failure to comply with this government regulation could void your authority to operate the equipment.

This digital apparatus does not exceed the CLASS B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from Nakamichi authorized dealers. Nakamichi is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Nakamichi America Corporation
955 Francisco St., Torrance, CA 90502
Phone: (310)538-8150

WARNING - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DANGER - Invisible laser radiation when opened and interlock failed or defeated. Avoid direct exposure to beam.

CAUTION - Use of the controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please record the serial number in the space provided below and retain this number. The serial number is located on the top panel of the unit.

Model Number : MJ-5.16si

Serial Number : ____________________

Notice

The Nakamichi MJ-5.16si is a five-disc CD-ROM changer designed for internal installation in the 5.25-inch half-height drive bay of a computer. It uses a SCSI interface and operates at up to 16 times the regular CD speed. The unit is designed for use in IBM PC/AT compatibles. Please contact the manufacturer regarding information about use with computers of the NEC PC-9800 series, Macintosh compatibles, in workstations, and on a network.

Note

- A SCSI controller and SCSI cable are not included. For best performance, you should use the products recommended by Nakamichi, as listed below.
- **Recommended SCSI cable**
  Use the cable that is supplied with the SCSI controller or a good-quality SCSI cable available from computer dealers.
- **Recommended SCSI controller**
  PCI bus type SCSI controller (for computers with PCI slots)/ASPI manager software
  Recommended controllers:
  Adaptec AHA-2940 (PCI bus), AHA-1542CF (ISA bus), AHA-1522A (ISA bus), AHA-1510A (ISA bus)

Please read this manual thoroughly before installing and using the unit. Observe all instructions closely to ensure proper operation, and retain the manual for future reference.

Safety Precautions

WARNING

Read and closely follow the warnings listed below to prevent the danger of fire and electric shock.

- This unit is designed only to be powered by the internal power supply of the computer (5V/12V DC). Do not use any other kind of power supply.
- Do not attempt to disassemble the unit or make any alterations. Consult your dealer regarding servicing, adjustment, and maintenance.
- Take care not to introduce any metallic or flammable objects into the unit.
- Do not place any containers with liquids (flower vase etc.) or containers with small metal parts (paper clips etc.) on top of the unit.

WARNING

If any of the following conditions occurs, immediately disconnect the power cord of the computer from the AC outlet and contact your dealer or an authorized Nakamichi service station. Continuing to use the computer involves the danger of fire and electric shock.

- Smoke or unusual smell is coming from the unit.
- Water has entered the unit or the unit has become wet.
- A foreign object has entered the unit.
- The unit has been dropped or the front panel or housing has been damaged.
- The power supply cable was damaged, causing wire break or exposed leads.

CAUTION

Observe the following precaution. Otherwise your computer may be damaged by electrostatic electricity.

- While installing the unit, touch a metal part of the computer to prevent electrostatic buildup.

CAUTION

Observe the following precautions. Otherwise it may not be possible to properly remove discs from the unit, and the unit or discs may be damaged.

- 8-cm (3-inch) CDs (CD Singles) cannot be used with this unit. Do not attempt to load such discs, either with or without an adapter.

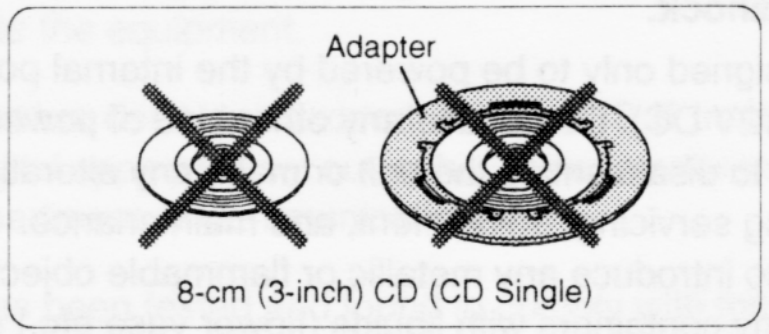

- Do not use any commercially available CD accessories (such as adapters for 3-inch CDs, disc stabilizers, disc protectors, cleaning discs etc.).
- Use the unit only in a fully horizontal or vertical position. Do not use it when set at an angle or upside down.
- Insert discs carefully and avoid excessive force.
- Do not activate disc eject while the front panel of the unit is facing down. Otherwise the disc will drop out.
- Do not move the unit while it is in use.
- Remove all discs from the unit before moving or transporting it.
- Protect the unit from shocks and vibrations.

CAUTION

Do not use the unit in the following locations to prevent the danger of fire, electric shock, or injury.

- In locations exposed to oily smoke or steam, such as in a kitchen or close to a humidifier.
- In locations exposed to rain or splashes of water, such as outdoors, in a bathroom, close to a window etc.
- On an unstable or slanted surface without proper support.
- In locations exposed to direct sunlight or hot air, where the temperature can exceed 45°C.
- In very cold locations, where the temperature is below 0°C.
- In locations with high levels of dust and humidity, such as outdoors or in a bathroom.

CAUTION

Closely observe the precautions listed below to prevent the danger of fire and electric shock.

- Read the documentation of your computer, especially the section dealing with installing a CD-ROM drive in the 5.25-inch half-height drive bay.
- In some computers, a different installation procedure from the one described in the manual of the MJ-5.16si may be required. In such cases, follow the documentation of the computer.
- Keep the power supply cable away from hot appliances.
- Do not touch other parts in the computer during installation, such as the power supply or parts on the circuit board.
- Do not touch the power supply cable or plug with wet hands.
- Do not pull the cable when disconnecting the power supply. Always grasp the plug.
- Disconnect the power cord of the computer from the AC outlet before connecting, moving, or transporting the unit and before carrying out any maintenance.

CAUTION

Closely observe the precautions listed below to prevent the danger of sight impairment, hearing impairment, electric shock, or other injury.

- Do not disassemble the unit or look into the laser source.
- Turn the volume control to minimum before switching the power on.
- Do not raise the volume to exceedingly high levels when listening with headphones.
- Use only the specified cable for connections.
- Do not step on the unit. Take special precautions when children are around.

Usage Precautions

Changing the installation location

To assure stable data readout at high speed (up to 16 times regular CD speed), this unit automatically performs various adjustments related to the installation position after a disc is inserted. If the position of the unit is changed for example from horizontal to vertical with discs inserted, correct data readout may no longer be possible. Be sure to remove all discs before changing the installation location.

Switching rotation speed

Since discs rotate at very high speed (up to 16 times regular CD speed), discs which have a slight concentric error may vibrate audibly, and data readout may be delayed. In such a case, it is possible to reduce the rotation speed by pressing disc buttons 1 and 2 simultaneously. All disc indicators flash briefly, to indicate that rotation speed has been changed. To return to the original rotation speed, press disc buttons 1 and 3 simultaneously.

Cleaning

Clean the front panel of the unit only by wiping it with a soft, dry cloth. Do not use any solvents or alcohol-based cleaners, since these can lead to deformation or decoloration and can damage the labelling.

Moisture condensation

A sudden increase in the ambient temperature of the unit can cause moisture to condense on the optical lens of the laser pickup, making correct operation impossible. Condensation can be removed by turning on the power to the computer and letting it stand for about 30 minutes to 1 hour. After the moisture has evaporated, normal operation will be restored.

Package contents

- MJ-5.16si unit	(1)
- Fastening screws	(4)
- Support software floppy disk	(1)
- Jumpers	(7)
- Hardware manual	(1)
- Software manual	(1)
- Warranty	(1)

Parts and Functions

Front Panel

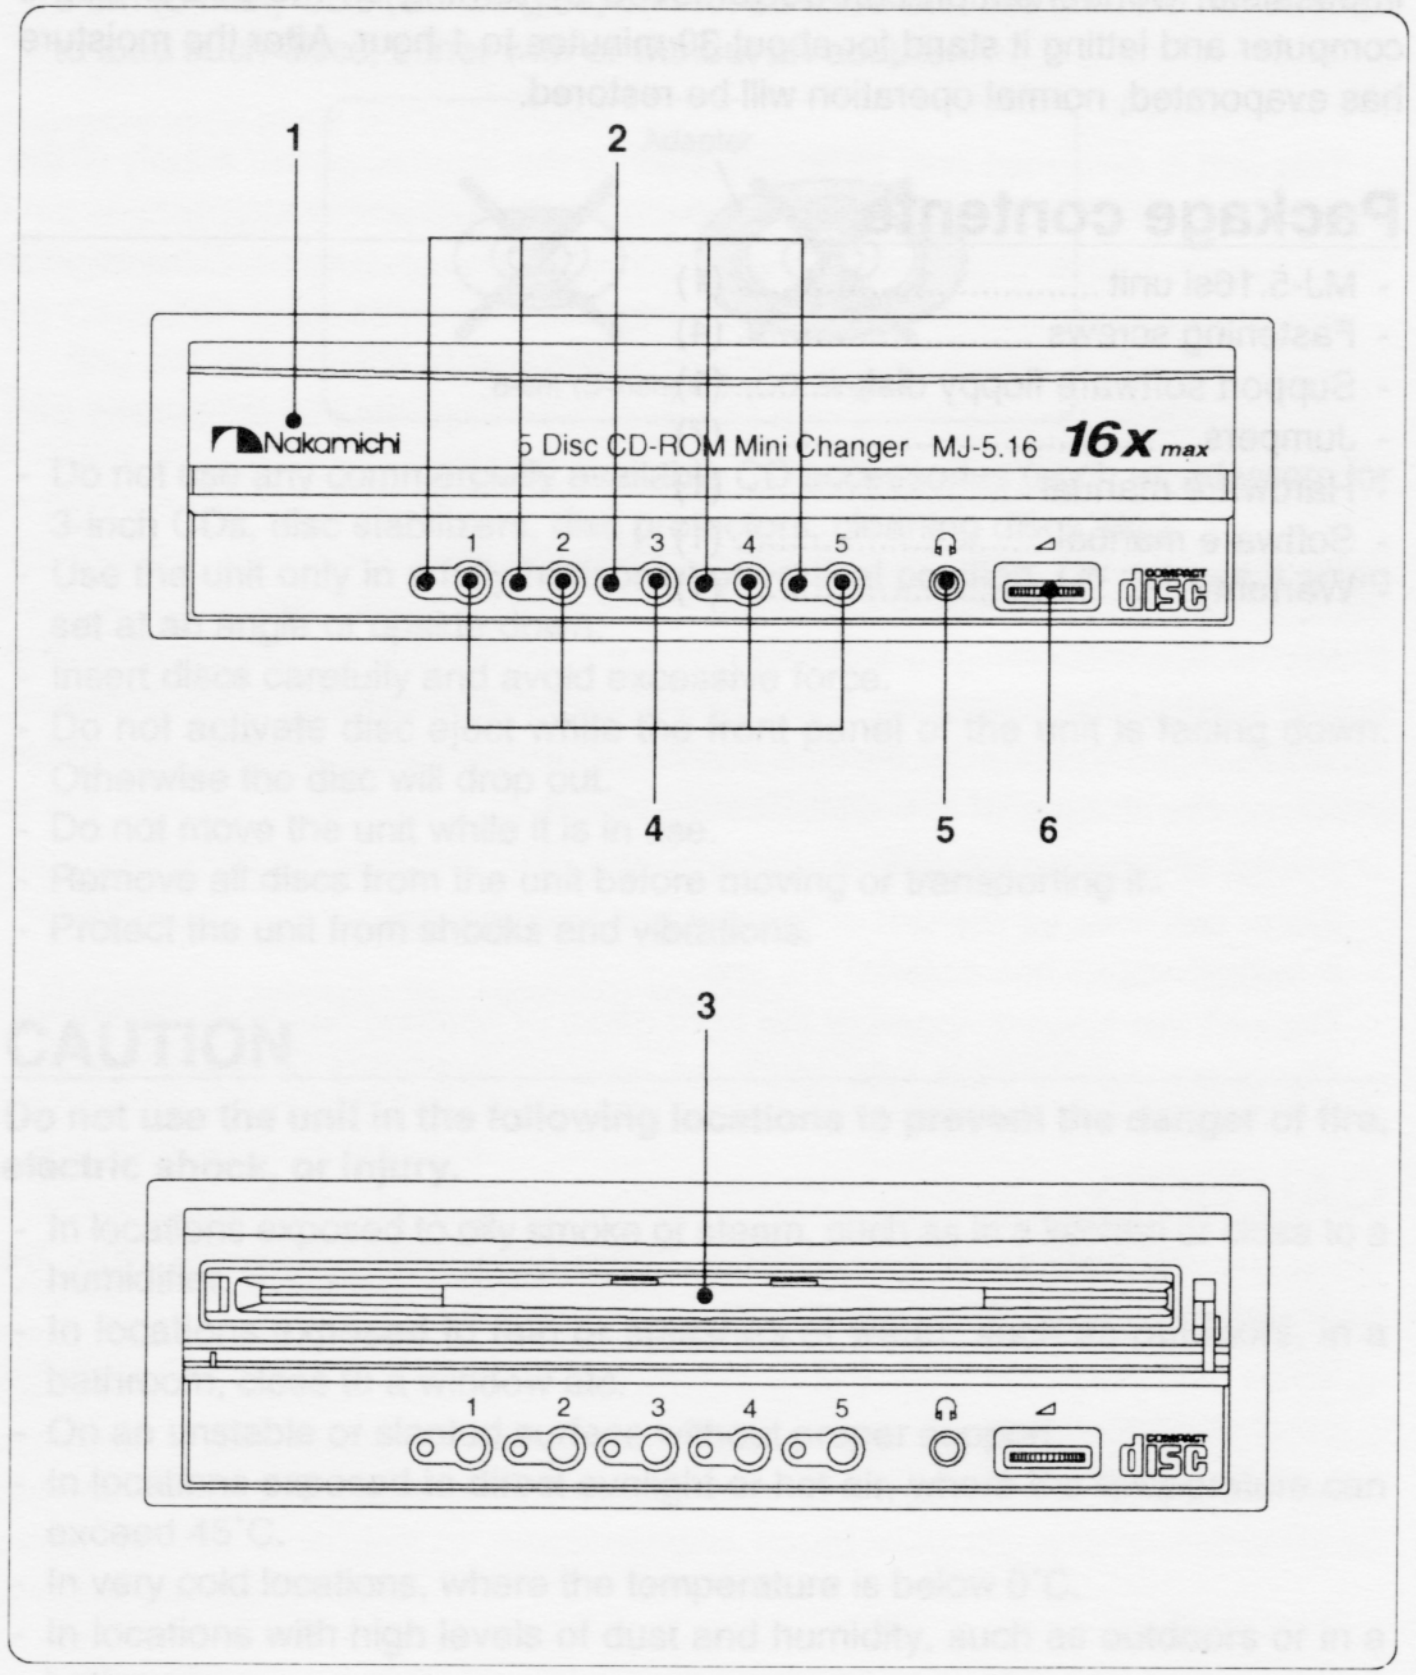
1
2
Nakamichi
5 Disc CD-ROM Mini Changer MJ-5.16
16x max
1
2
3
4
5
COMPACT disc
4
5
6
3
1
2
3
4
5
COMPACT disc

1. Dust cover

Opens and closes automatically when one of the disc buttons is pressed.

2. Disc indicators

No disc inserted	Indicator out
Disc inserted	Indicator lit
Disc is being accessed	Indicator flashes rapidly
Dust cover open	Indicator flashes slowly

3. Disc slot

4. Disc buttons

Serve to insert and remove discs.

5. Headphone jack

Allows connection of stereo headphones with miniature phone plug or amplified speakers, for playback of audio CDs. The sound of CD-ROMs does not appear at this jack.

6. Headphone level control

Serves to adjust the volume of stereo headphones or amplified speakers connected to the headphone jack. This control has no influence on the level of the signal at the rear-panel audio outputs.

Rear Panel

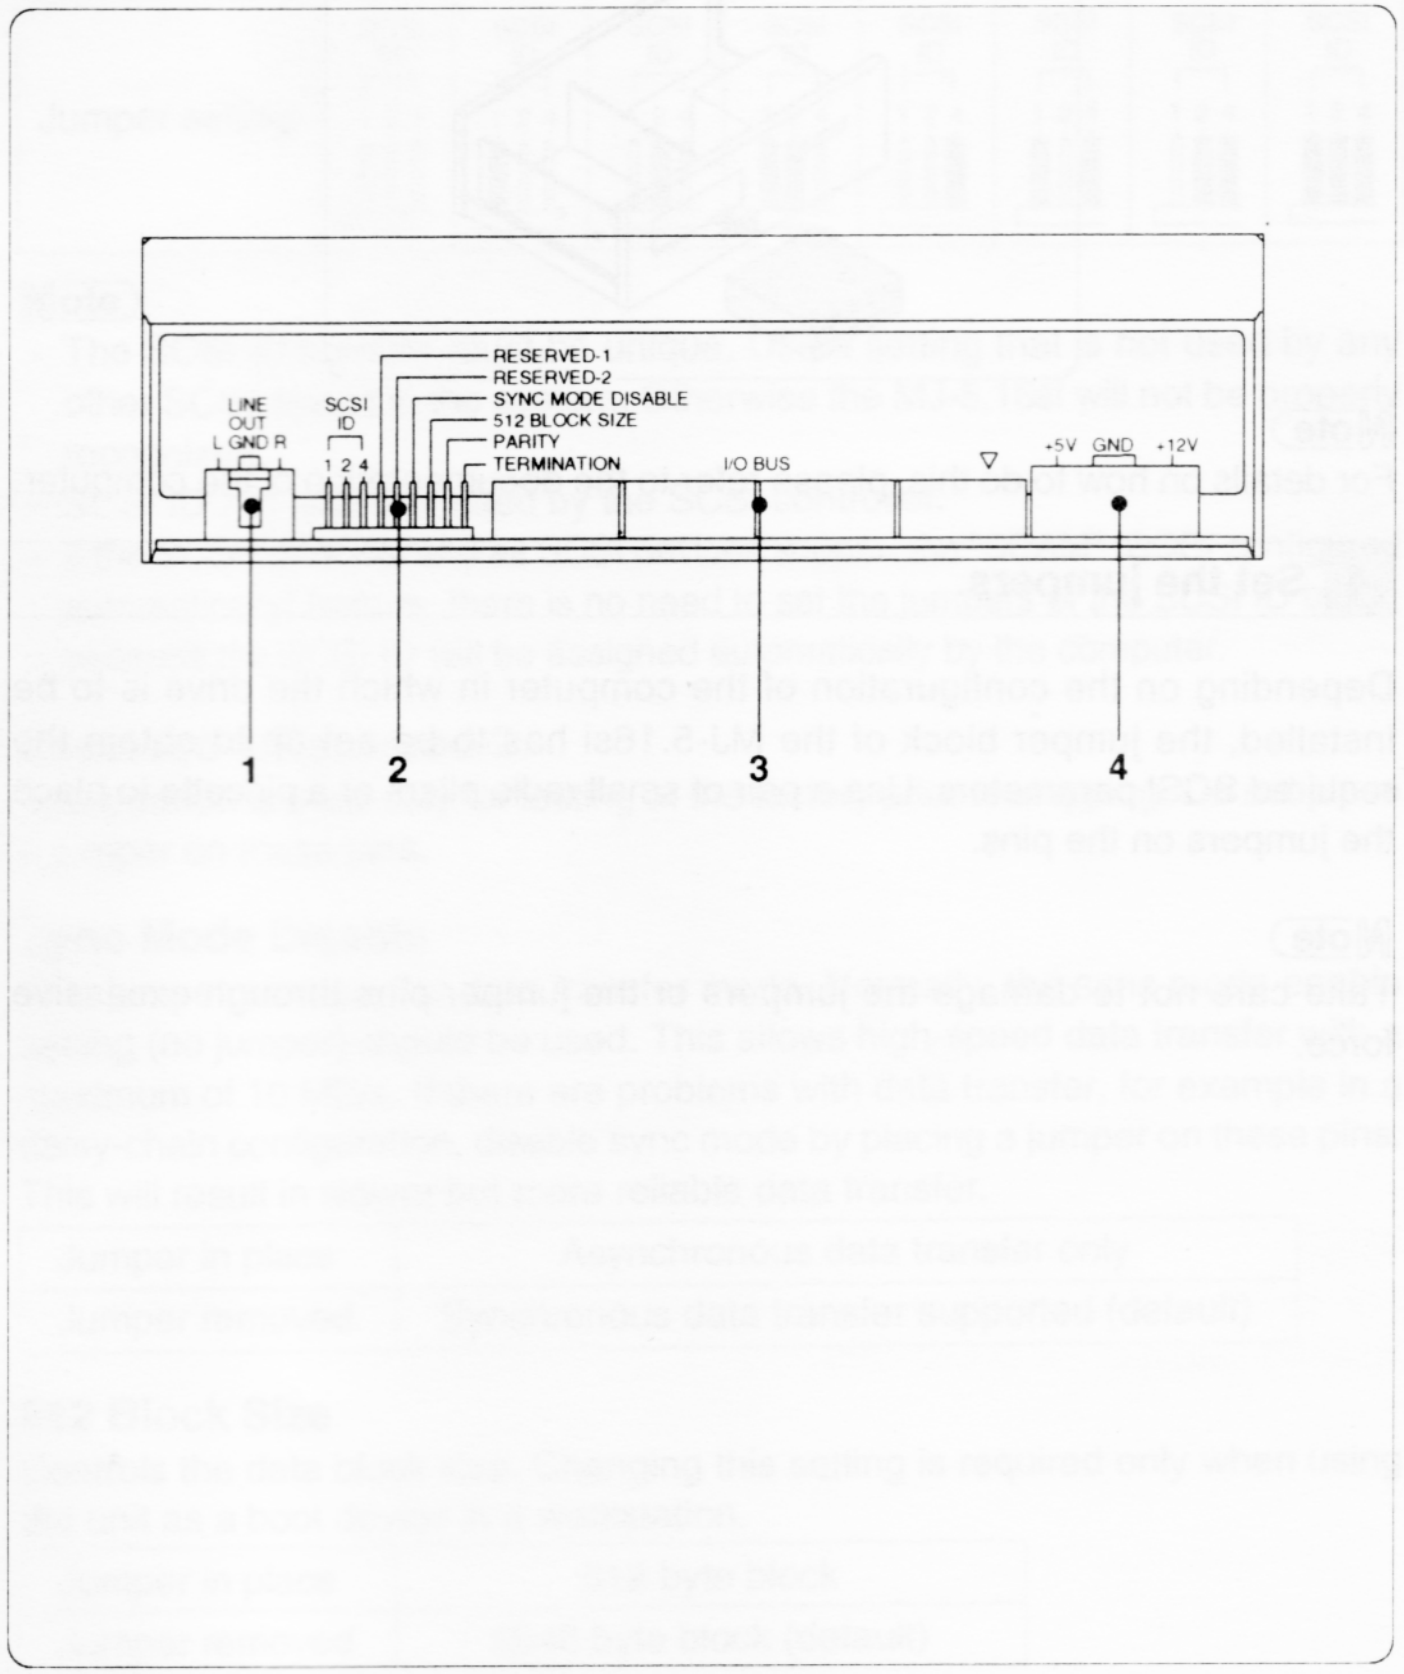
RESERVED-1
RESERVED-2
SYNC MODE DISABLE
512 BLOCK SIZE
PARITY
TERMINATION
LINE OUT
L GND R
SCSI ID
1 2 4
I/O BUS
+5V GND +12V
1
2
3
4

1. Analog audio output

Serves for connection to the analog audio input of a sound card. When this connection is established, audio CDs can be played through the sound system of the computer.

2. Jumper block

Serves to set the unit's SCSI parameters such as ID number, data transfer mode, data block size, parity check, and termination.

3. SCSI interface connector

To be connected to the SCSI controller of the computer.

4. DC power supply connector

To be connected to a spare DC power supply lead of the computer, which supplies 5V/12V DC.

Installation in the Computer

Caution

- While installing the unit, touch a metal part of the computer's chassis to prevent electrostatic buildup.
- Read the documentation of your computer, especially the section dealing with installing a CD-ROM drive in the 5.25-inch half-height drive bay.
- In some computers, a different installation procedure from the one described in the manual of the MJ-5.16si may be required. In such cases, follow the documentation of the computer.
- Do not touch other parts in the computer during installation, such as the power supply or parts on the circuit board.

1 Disconnect the power cord of the computer from the AC outlet.

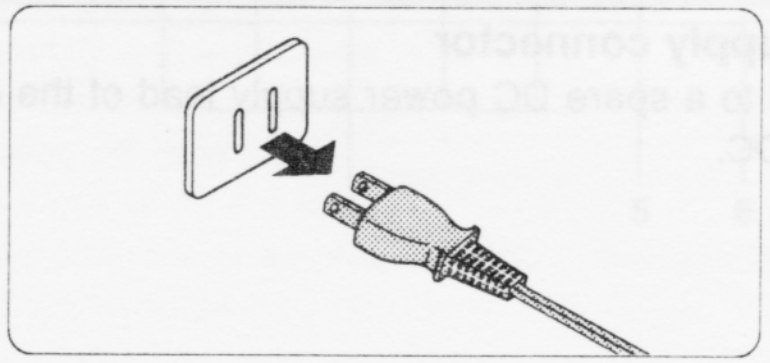

2 Open the cover of the computer.

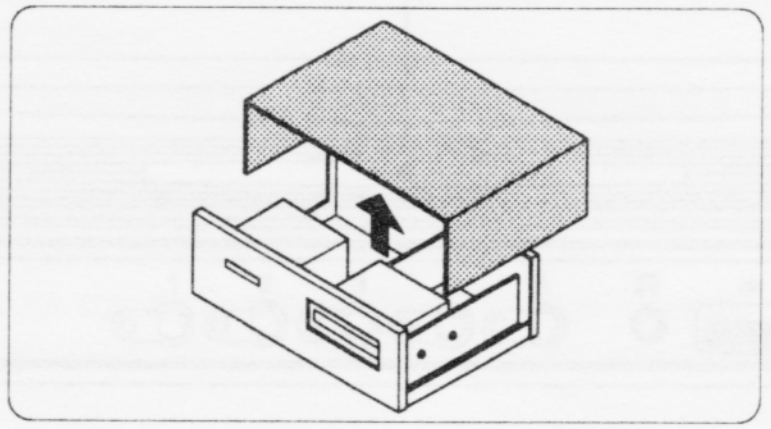

Note

For details on how to do this, please refer to the documentation of the computer.

3 Remove the cover from an empty 5.25-inch drive bay in the computer, or remove an existing internal CD-ROM drive.

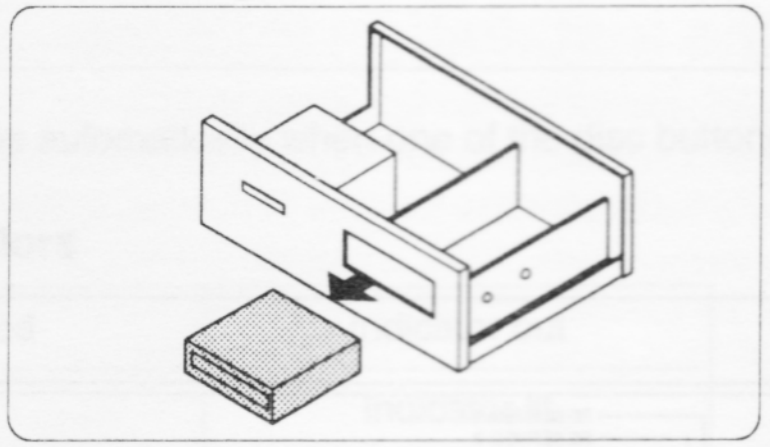

Note

For details on how to do this, please refer to the documentation of the computer.

4 Set the jumpers.

Depending on the configuration of the computer in which the drive is to be installed, the jumper block of the MJ-5.16si has to be set up to obtain the required SCSI parameters. Use a pair of small radio pliers or a pincette to place the jumpers on the pins.

Note

Take care not to damage the jumpers or the jumper pins through excessive force.

SCSI ID setting

Determines the SCSI ID by which the computer will identify the MJ-5.16si.

SCSI ID	0	1	2	3	4	5	6	7
Jumper setting								

Note

- The SCSI ID number must be unique. Use a setting that is not used by any other SCSI device in the system. Otherwise the MJ-5.16si will not be properly recognized.
- SCSI ID 7 is normally used by the SCSI controller.
- If the SCSI controller and all SCSI devices support the "SCAM" (SCSI configured automatically) feature, there is no need to set the jumpers of the SCSI ID block, because the SCSI ID will be assigned automatically by the computer.

Reserved-1/Reserved-2

This position is used only for testing at the factory prior to shipping. Do not place a jumper on these pins.

Sync Mode Disable

This jumper controls the data transfer mode. Normally, the sync mode enable setting (no jumper) should be used. This allows high-speed data transfer with a maximum of 10 MB/s. If there are problems with data transfer, for example in a daisy-chain configuration, disable sync mode by placing a jumper on these pins. This will result in slower but more reliable data transfer.

Jumper in place	Asynchronous data transfer only
Jumper removed	Synchronous data transfer supported (default)

512 Block Size

Controls the data block size. Changing this setting is required only when using the unit as a boot device in a workstation.

Jumper in place	512 byte block
Jumper removed	2048 byte block (default)

Parity

Controls the SCSI parity check function.

Jumper in place	Parity check enabled
Jumper removed	Parity check disabled (default)

Termination

Controls the termination status of the MJ-5.16si.

Jumper in place	Termination enabled
Jumper removed	Termination disabled (default)

When the MJ-5.16si is the last device on the SCSI bus, termination should be enabled. Otherwise termination should be disabled.

- **When connecting only the MJ-5.16si to the SCSI controller**

Set termination on the SCSI controller and on the MJ-5.16si to ON.

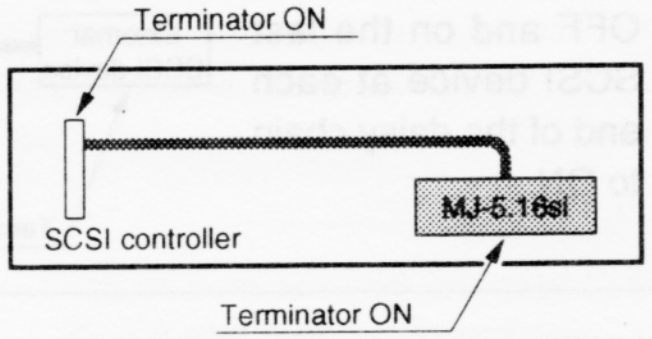
Terminator ON
SCSI controller
MJ-5.16si
Terminator ON

- **When connecting the MJ-5.16si at the end of an internal daisy chain (no external SCSI devices)**

Set termination on the SCSI controller and on the MJ-5.16si to ON.

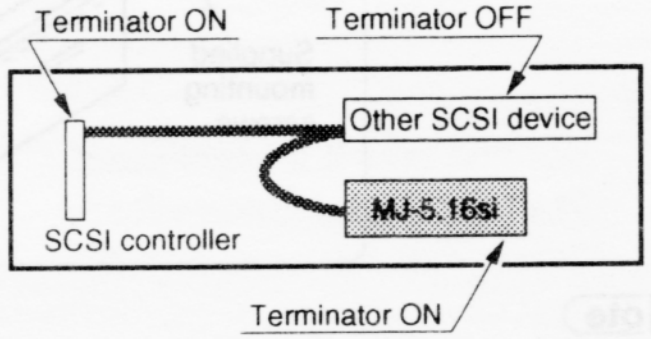
Terminator ON
Terminator OFF
Other SCSI device
MJ-5.16si
SCSI controller
Terminator ON

- **When connecting the MJ-5.16si within an internal daisy chain (no external SCSI devices)**

Set termination on the last SCSI device on the daisy chain to ON and on the MJ-5.16si to OFF.

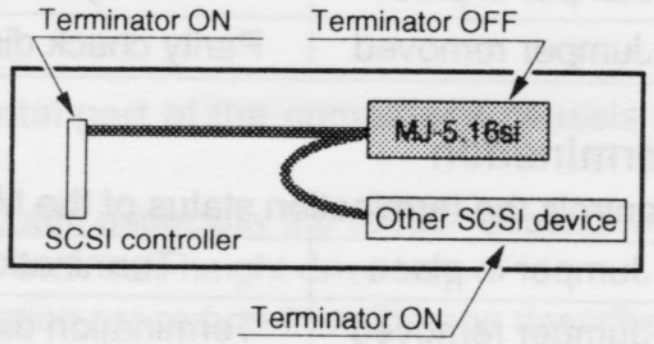
Terminator ON
Terminator OFF
MJ-5.16si
Other SCSI device
SCSI controller
Terminator ON

- **When connecting the MJ-5.16si and one or more external SCSI devices**

Set termination on the SCSI controller to OFF and on the last SCSI device at each end of the daisy chain to ON.

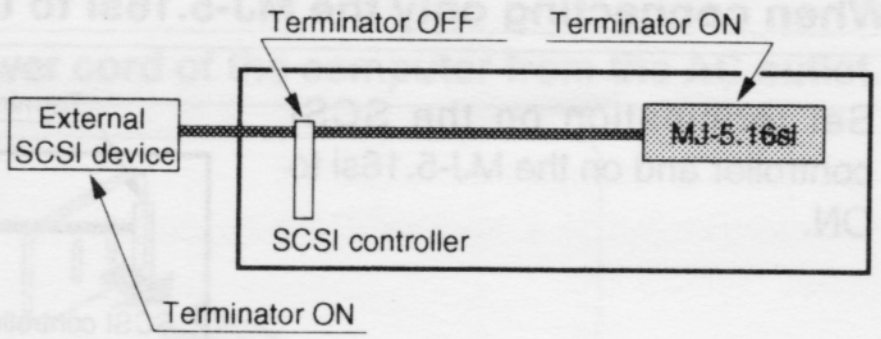
Terminator OFF
Terminator ON
External SCSI device
MJ-5.16si
SCSI controller
Terminator ON

5 Mount the MJ-5.16si in the drive bay.

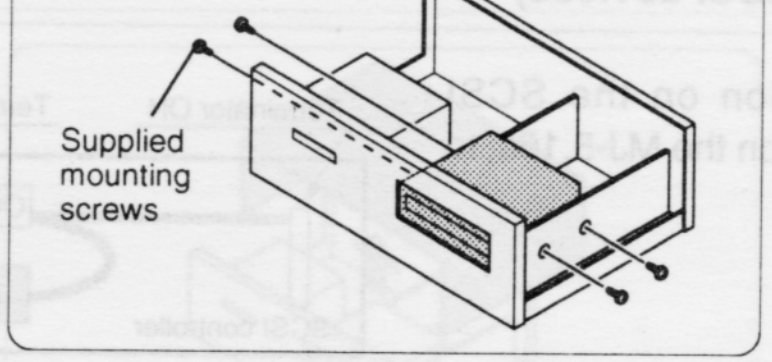
Supplied mounting screws

Note

- For details on how to do this, please refer to the documentation of the computer.
- Do not use any screws longer than the supplied fastening screws (M3×4 mm). Otherwise internal damage to the unit may occur.

6 Connect the SCSI interface cable.

Plug the connector of the SCSI interface cable into the SCSI interface connector on the MJ-5.16si.

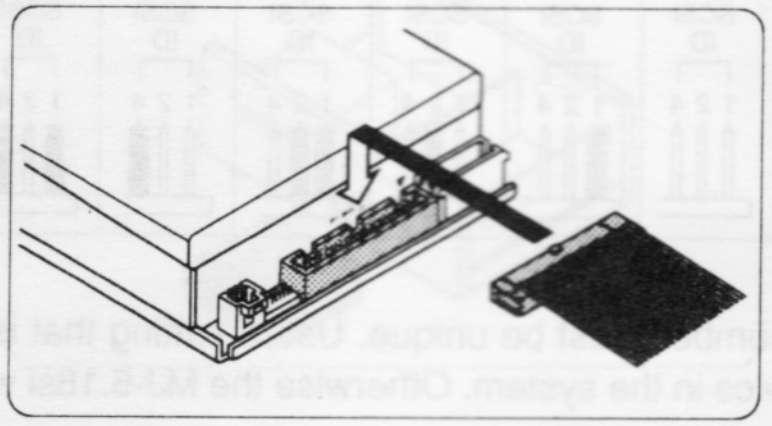

7 Connect the audio cable.

Connect the analog audio output of the MJ-5.16si to the analog audio input of the sound card in the computer. This allows you to play audio CDs through the sound system of the computer.

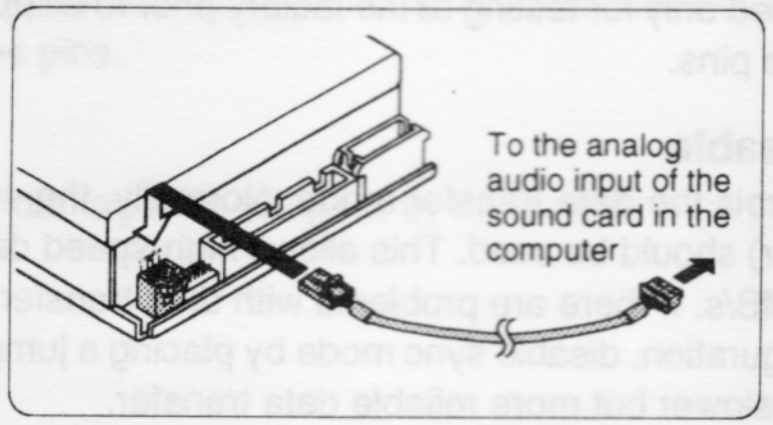
To the analog audio input of the sound card in the computer

Note

For details on the analog input of your sound card, please refer to the documentation of the sound card.

8 Connect the power supply cable.

Use a spare DC power supply lead of the computer and plug it into the DC power supply connector on the MJ-5.16si.

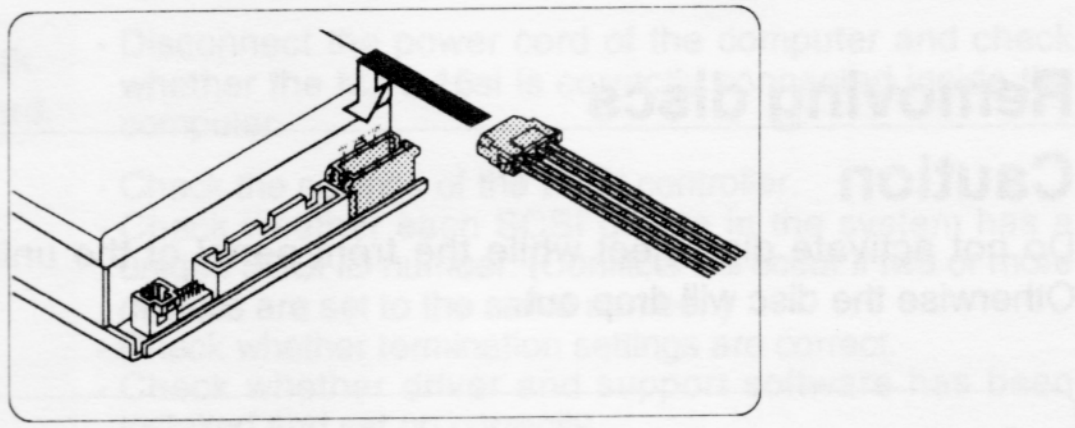

Note

For information on spare DC leads, please refer to the documentation of the computer.

9 Close the cover of the computer.

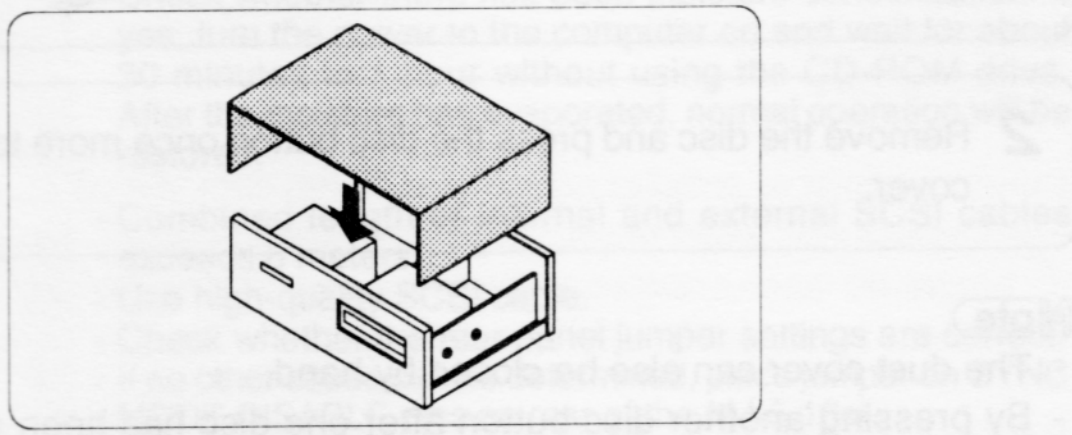

10 Plug the power cord of the computer into an AC outlet.

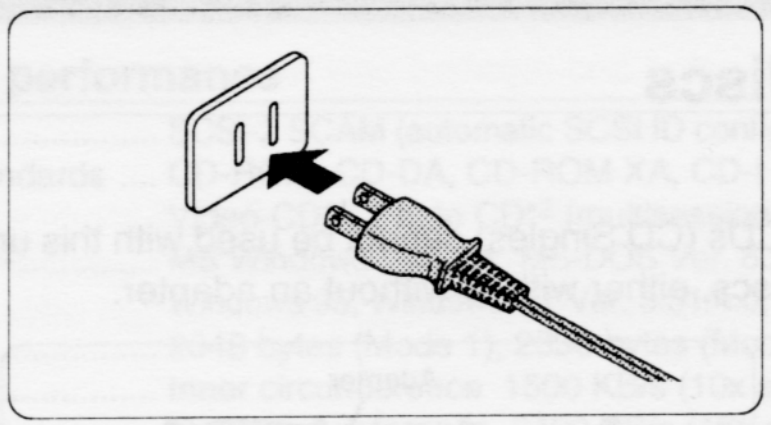

Operation

Loading discs

Caution

- 8-cm (3-inch) CDs (CD Singles) cannot be used with this unit. Do not attempt to load such discs, either with or without an adapter.

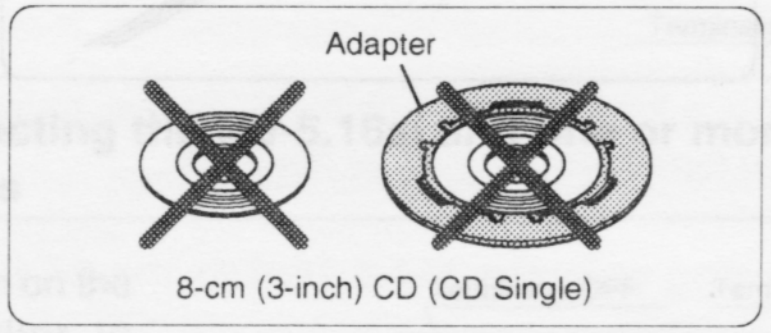
Adapter
8-cm (3-inch) CD (CD Single)

- Do not use any commercially available CD accessories (such as adapters for 3-inch CDs, disc stabilizers, disc protectors, cleaning discs etc.).
- Insert discs carefully and avoid excessive force.

1 Press the disc button with the number of the slot into which you want to insert the disc. The dust cover of the drive opens automatically.

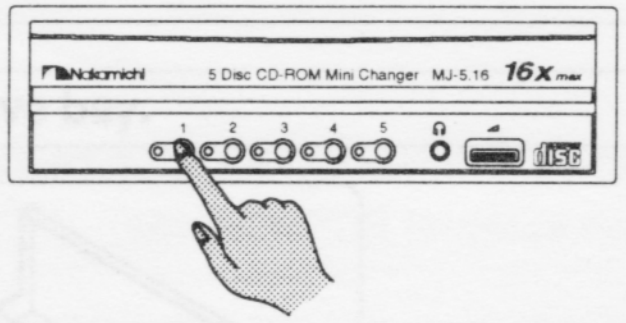
Nakamichi
5 Disc CD-ROM Mini Changer MJ-5.16
16X max
1
2
3
4
5

2 Insert the disc into the loading slot and give it a slight push. The disc will be automatically drawn into the unit, and the dust cover closes.

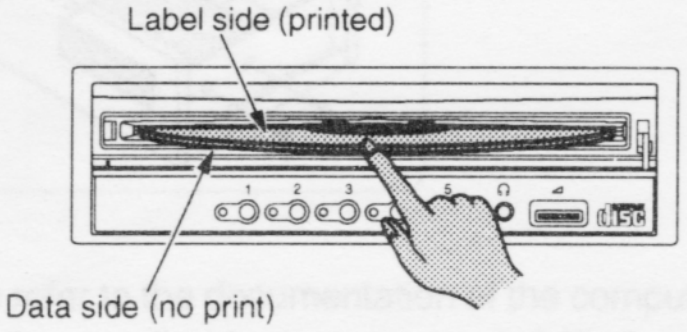
Label side (printed)
Data side (no print)
1
2
3
5

Note

- The data side of the disc (the side where nothing is printed) should be facing in direction of the disc buttons on the MJ-5.16si.
- By pressing another disc button after one disc has been inserted you can insert more discs.

Removing discs

Caution

Do not activate disc eject while the front panel of the unit is facing down. Otherwise the disc will drop out.

1 Press the disc button with the number of the slot from which you want to remove a disc. The dust cover of the drive opens automatically and the disc slides out.

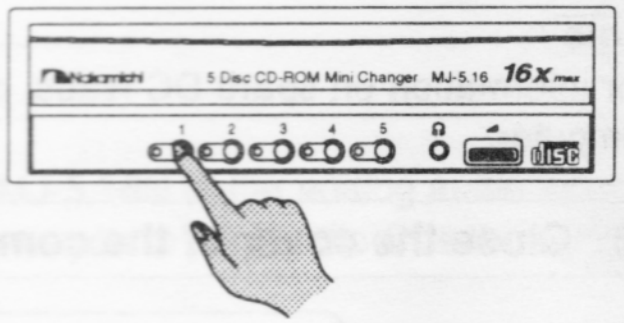
Nakamichi
5 Disc CD-ROM Mini Changer MJ-5.16
16X max
1
2
3
4
5

2 Remove the disc and press the disc button once more to close the dust cover.

Note

- The dust cover can also be closed by hand.
- By pressing another disc button after one disc has been removed you can remove more discs.

Troubleshooting

In case of an apparent malfunction, please check the following points first. If the problem persists, contact your dealer or an authorized service station.

Unit does not work. **Hum noise is heard.**	- Disconnect the power cord of the computer and check whether the MJ-5.16si is correctly connected inside the computer.
System does not boot.	Check the settings of the SCSI controller. - Check whether each SCSI device in the system has a unique SCSI ID number. (Conflicts will occur if two or more devices are set to the same number.) - Check whether termination settings are correct. - Check whether driver and support software has been installed and set up correctly.
Disc data cannot be accessed.	- Disconnect the power cord of the computer and check whether the MJ-5.16si is correctly connected inside the computer. - Check whether the disc was inserted with correct orientation. - Check whether the disc is scratched or contaminated. - Check whether there has been moisture condensation. If yes, turn the power to the computer on and wait for about 30 minutes to 1 hour without using the CD-ROM drive. After the moisture has evaporated, normal operation will be restored. - Combined length of internal and external SCSI cables exceeds 6 meters. - Use high-quality SCSI cable. - Check whether the rear panel jumper settings are correct. - If no other cause can be determined, place jumper on SYNC MODE DISABLE pins on rear of the MJ-5.16si.
Unit does not operate normally.	- Check rear-panel jumper settings. Perform the following steps: 1. Turn off the computer. 2. Keep disc buttons 1 and 5 depressed and turn the computer on. (Keep the buttons depressed for at least one second also after turning the computer on.)

Caution

If the MJ-5.16si is to be moved or shipped, do not forget to remove all discs. If the unit is moved or shipped with inserted discs, the discs may get jammed inside the unit and damage to the discs and/or the MJ-5.16si may occur.

Specifications

Functions and performance

Interface	SCSI-2 SCAM (automatic SCSI ID configuration) compatible
Compatible disc standards	CD-ROM, CD-DA, CD-ROM XA, CD-I (FMV)*1, Video-CD*1, Photo CD*2 (multisession), CD-Plus
Operating systems*3	MS Windows Ver. 3.1, MS-DOS Ver. 6.2, PC DOS Ver.6.3, Windows 95, Windows NT Ver. 3.51/4.0, OS/2 Warp Ver. 4.0
User data/block	2048 bytes (Mode 1), 2336 bytes (Mode 2)
Data transfer rate	Inner circumference 1500 KB/s (10x speed), Outer circumference 2400 KB/s (16x speed)
Burst transfer rate	10 MB/s (synchronous transfer mode)
Average access time	120 ms
Buffer memory	256 KB
Audio outputs	
Front panel	Headphone output (stereo miniphone jack), 15 mV/8.2 Ω (1 kHz, –20 dB)
Rear panel	Analog line output (2-channel 4P connector), 800 mV/10 kΩ (1 kHz, 0 dB)

Reliability

Read error rate	
Mode 1	10^{-12} bytes
Mode 2	10^{-9} bytes

Environment

Operating environment	0 to +45 °C, 0 to 70 % RH (no condensation)

General specifications

Life expectancy	100,000 POH
Power requirements	5 V DC (max. 1.8 A), 12 V DC (max. 1.5 A)
Dimensions*4	149 (W) x 43 (H) x 222 (D) mm 5-7/8 (W) x 1-11/16 (H) x 8-3/4 (D) inches
Mass	approx. 1.2 kg, 2 lbs. 10 oz.

*1 MPEG playback capability required.
*2 Photo CD playback software required.
*3 Please contact the manufacturer regarding information about use with computers of the NEC PC-9800 series, Macintosh compatibles, in workstations, and on a network.
*4 Dimensions do not include protruding parts. Width and height dimensions refer to the front panel.
- Specifications and design are subject to change for further improvement without notice.
- Trademarks and operating system names mentioned in this documentation are the property of their respective owners.

CAUTION

Adjusting the knobs, switches and controls, etc. or taking actions not specified herein may result in a harmful emission of laser beams. This Compact Disc Player must be adjusted and repaired only by qualified service personnel.

OBSERVERA!

Inställningar av rattarna, omkopplarna eller övriga kontrollknappar som inte anges i bruksanvisningen kan resultera i farlig laserustrålning. Justering eller reparation av denna kompaktskivspelare skall endast utföras av kvalificerad servicepersonal.

HUOMAUTUS

Jos nuppeja, kytkimiä ja säätimiä ym. säädetään tai laitetta käytetään toisella tavalla kuin on selostettu, tuloksena saattaa olla vaarallista lasersäteiden vuotoa. CD-soittimen säätö ja korjaus on jätettävä aina asiantuntevan huoltoteknikon tehtäväksi.

OBS!

Indstilling af knapper, cmskiftere og øvrige kontrolknapper, som ikke følger den i brugsanvisningen beskrevne måde, kan resultere i farlig laserudstråling. Justering eller reparation af denne CD-afspiller må kun udføres af kvalificeret service-personale.

OBS!

Justering av ratt, brytere og kontroller etc., eller annet som ikke er beskrevet her, kan resultere i farlig laserbestråling. Justering eller reparasjon av denne CD-spilleren må bare utføres av kvalifiserte fagfolk.

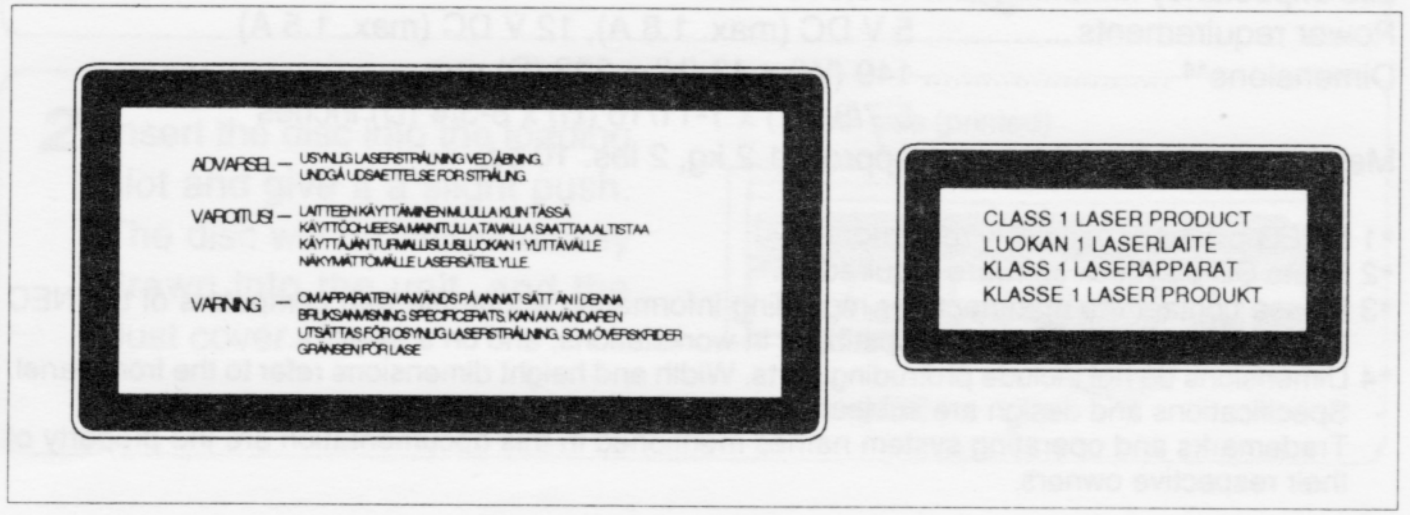

ADVARSEL – USYNLIG LASERSTRÅLNING VED ÅBNING.
UNDGÅ UDSAETTELSE FOR STRÅLING.

VAROITUS! – LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ
KÄYTTÖOHJEESA MAINITULLA TAVALLA SAATTAA ALTISTAA
KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE
NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VARNING – OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA
BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN
UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING, SOM ÖVERSKRIDER
GRÄNSEN FÖR LASE

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT
KLASSE 1 LASER PRODUKT

LASER DIODE PROPERTIES
MAXIMUM RADIANT POWER: 0.5 mW
WAVELENGTH: 790 nm
EMISSION DURATION: CONTINUOUS

This label is attached to the Compact Disc Player on the locations specified in the illustration. For your own protection, you are strongly advised to follow the directions on this label, when handling laser radiation-emitting equipment. This label indicates that the equipment contains laser radiation-emitting components.

Denna etikett finns fastklistrad på CD-spelaren på det ställe som framgår av illustrationen. För din egen säkerhet råder vi dig att noggrant följa de anvisningar som anges på etiketten vid hantering av laserutstrålande produkter. Denna etikett anger att produkten innehåller laserutstrålande komponenter.

CD-soittimeen on kiinnitetty tarra kuvan osoittamaan paikkaan. Oman turvallisuutesi vuoksi on tärkeää noudattaa tarkasti tarran ohjeita, kun käytät lasersäteitä lähettäviä laitteita. Tarra osoittaa, että laite sisältää lasersäteitä lähettäviä osia.

Denne mærkat er anbragt på CD-afspilleren som vist på illustrationen. For din egen sikkerheds skyld bør du nøje følge anvisningerne på denne mærkat, når du bruger de laserudstrålende komponenter. Denne mærkat viser, at apparatet indeholder laserudstrålende komponenter.

Denne etiketten er festet på CD-spilleren på de steder som er spesifisert i illustrasjonen. Av sikkerhetsmessige årsaker, anbefaler vi på det sterkeste at anvisningene på etikettene følges ved behandling av utstyr som inneholder laserstråler. Denne etiketten indikerer at utstyret inneholder komponenter som avgir laserstråler.

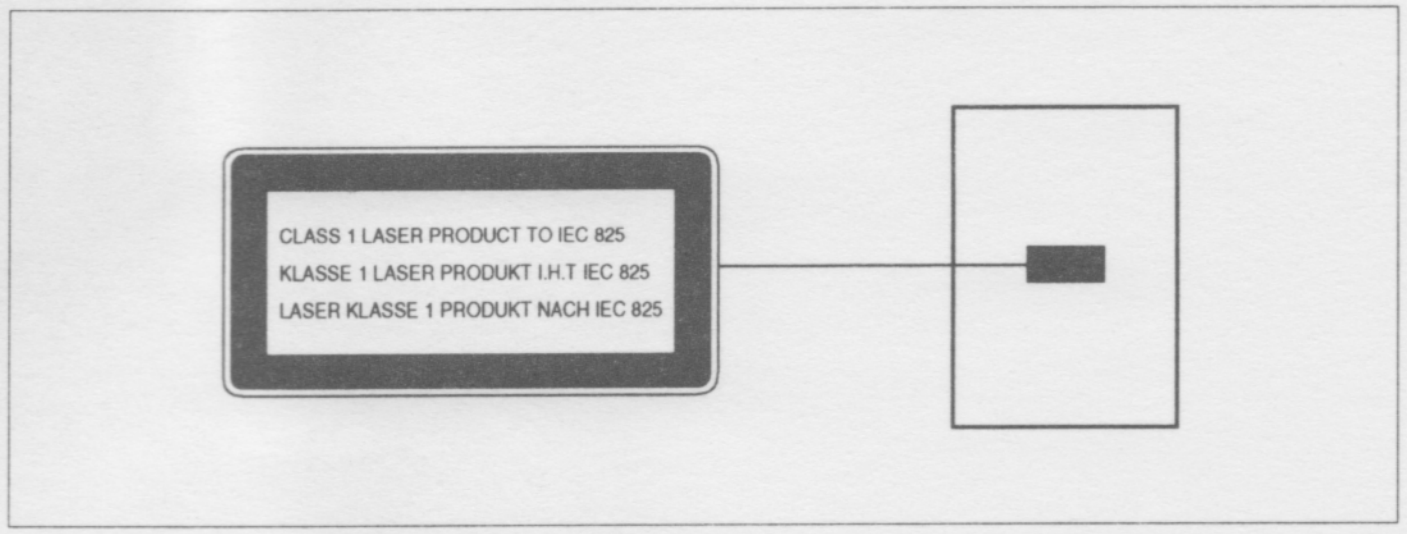
CLASS 1 LASER PRODUCT TO IEC 825
KLASSE 1 LASER PRODUKT I.H.T IEC 825
LASER KLASSE 1 PRODUKT NACH IEC 825

Nakamichi Corporation 1-153 Suzukicho, Kodaira, Tokyo 187 E-mail: nsupport@nakamichi.co.jp
Nakamichi America Corporation 955 Francisco St., Torrance, CA 90502 Phone: (310) 538-8150 E-mail: cdrom-support@nakamichiusa.com

© Nakamichi Corp. 1997